


KNIFE SHARPENER

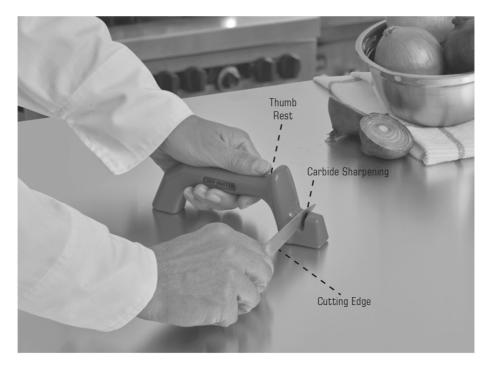

INSTRUCTIONS

- 1. Remove screws from the plastic handle and set aside for reassembly.
- 2. Carefully pull both sides apart and flip tungsten carbide blade around to the unused side.
- 3. Fit the sides back together and insert screws, tightening each until secure and ready to use.